



# SJ-600/500・SC-500 補足説明書

## フィード方向の色の差を防ぐ

フィード方向の色の差は、[テイハバインサツ] メニューを [ユウコウ] に設定することで防止できることがあります。条件によっては、プリンティングキャリッジの移動幅の差によってフィード方向の色が変化することがあります。[ユウコウ] に設定すると、プリンティングキャリッジの移動幅が一定になり、印刷時間が長くなることがあります。

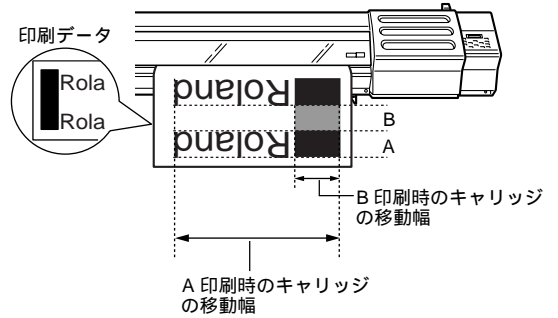


1 [メニュー] キーを押します。[▼] キーを押して、図の表示にします。



2 [▶] キーを押して図の表示にします。



3 [▼] キーを押して [ユウコウ] を選択します。

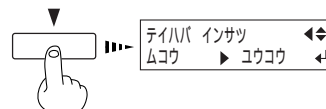

4 [ENTER] キーを押します。



26015435 - R1

Copyright © 2003 Roland DG Corporation

<http://www.rolanddg.co.jp/>

Firmware Version

SJ-600/500 : 4.3 ~

SC-500 : 3.5 ~


R1-030314

# SJ-600/500 • SC-500 Supplement


## Preventing Color Discrepancies in the Feed Direction

It may be possible to prevent color discrepancies in the feed direction by setting the [FULL WIDTH S] menu item to [ENABLE].

Under some conditions, differences in the movement width of the printing carriage may produce changes in color in the feed direction. When the setting for [ENABLE] is made, the movement width of the printing carriage becomes uniform, and printing may take more time.

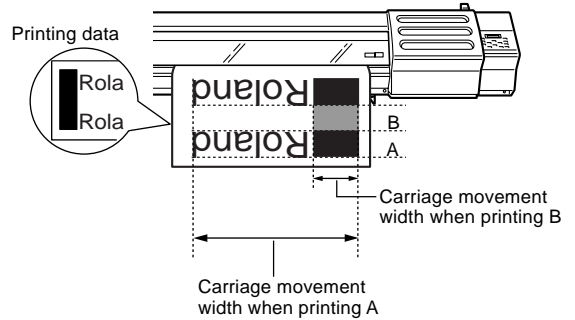

- 1 Press the [MENU] key, and press the [▼] key to display the screen shown in the figure.



- 2 Press the [▶] key to display the screen shown in the figure.



- 3 Press the [▼] key and select [ENABLE].



- 4 Press the [ENTER] key.

Copyright © 2003 Roland DG Corporation

<http://www.rolanddg.com/>

Firmware Version

SJ-600/500 : 4.3 or later

SC-500 : 3.5 or later