

SOLJET *PRO II V*
Sign Maker by Roland DG Corporation

SC-545EX
Print & Cut
SC-545EXW
Print & Cut

Important Notes for *ECO-SOL MAX* Users

Please be sure to read this before you begin setup for the machine. Be sure to carry out installation of ECO-SOL MAX ink cartridges according to procedure described in this document.



This machine is compatible with *ECO-SOL MAX*.

Important Notes to ECO-SOL MAX Users


Filling with Ink for the First Time

When filling with ink for the first time after purchase, select ECO-SOL MAX as the ink type. For other operations, follow the instructions in the User's Manual. Use cleaning cartridges intended for ECO-SOL INK.

Important!

> Selection of an incorrect ink type may reduce printing quality. Select it with care.

Be sure to select [E-SOL Max].

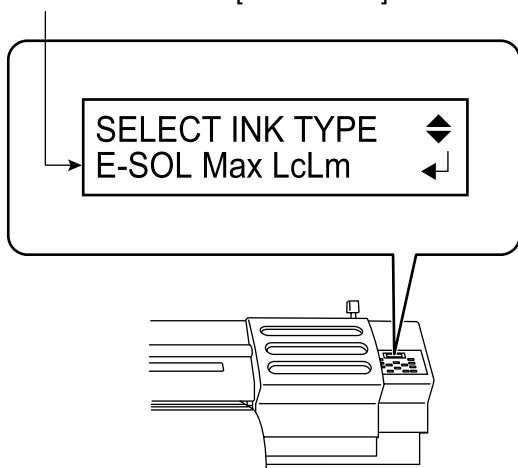

- ① Use to select the ink type.
- ② Press to enable the selection.

Ink	Model name	Colors	SELECT INK TYPE setting
ECO-SOL MAX	SC-545EX	6-color (cyan, magenta, yellow, black, light cyan, and light magenta)	<input type="text" value="SELECT INK TYPE"/> <input type="button" value="◆"/> <input type="text" value="E-SOL Max LcLm"/> <input type="button" value="↵"/>
	SC-545EXW	5-color (*) (cyan, magenta, yellow, black, and white)	<input type="text" value="SELECT INK TYPE"/> <input type="button" value="◆"/> <input type="text" value="E-SOL Max KCMYWW"/> <input type="button" value="↵"/>

*White ink remains unchanged as the conventional ECO-SOL INK type.

Usage and Handling of ECO-SOL MAX Ink

Other operations and methods of usage and handling are identical to those for ECO-SOL INK. Follow the instructions in the User's Manual.

Added Menu Items (SC-545EX)

The new setting items described in the User's Manual have been added to the SC-545EX.

SELECT INK TYPE Item

In addition to the existing "ECO-SOL INK" item, selection of "ECO-SOL MAX" is also possible.



E-SOL Max LcLm


This is the ECO-SOL MAX 6-color mode (cyan, magenta, yellow, black, light cyan, and light magenta).

ECO-SOL LcLm

This is the ECO-SOL INK 6-color mode (cyan, magenta, yellow, black, light cyan, and light magenta).

INK CONTROL Menu Item

[CHANGE INK SET] has been added. It is now possible to change from a state of being filled with conventional "ECO-SOL INK" to "ECO-SOL MAX" ink.

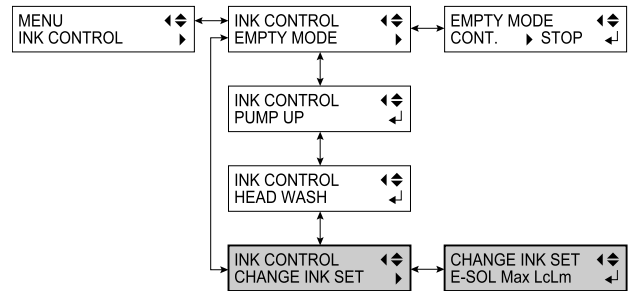

E-SOL Max LcLm

This changes the ink to the ECO-SOL MAX 6-color mode (cyan, magenta, yellow, black, light cyan, and light magenta).

ECO-SOL LcLm

This changes the ink to the ECO-SOL INK 6-color mode (cyan, magenta, yellow, black, light cyan, and light magenta).

Important!

- Follow the on-screen instructions to insert and remove the cartridges.
- All ink must be changed. ECO-SOL INK and ECO-SOL MAX ink cannot coexist.
- No SOL INK cleaning cartridges are required.

Added Menu Items (SC-545EXW)

The new setting items described in the User's Manual have been added to the SC-545EXW.

SELECT INKTYPE Item

In addition to the existing "ECO-SOL INK" item, selection of "ECO-SOL MAX" is also possible.

SELECT INK TYPE ◀▶
E-SOL Max KCMYWW ◀▶

E-SOL Max KCMYWW


This is the ECO-SOL MAX 5-color mode (cyan, magenta, yellow, black, and white). Note, however, that the white ink remains unchanged as the conventional ECO-SOL INK type.

ECO-SOL KCMYWW

This is the ECO-SOL INK 5-color mode (cyan, magenta, yellow, black, and white).

INK CONTROL Menu Item

[CHANGE INK SET] has been added. It is now possible to change from a state of being filled with conventional "ECO-SOL INK" to "ECO-SOL MAX" ink.

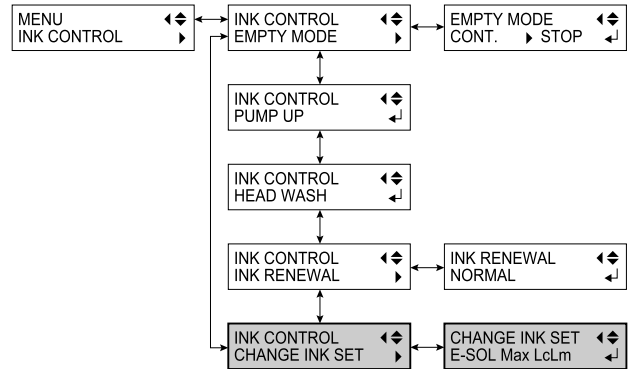

E-SOL Max KCMYWW

This changes the ink to the ECO-SOL MAX 5-color mode (cyan, magenta, yellow, black, and white). Note, however, that the white ink remains unchanged as the conventional ECO-SOL INK type.

ECO-SOL KCMYWW

This changes the ink to the ECO-SOL INK 5-color mode (cyan, magenta, yellow, black, and white).

Important!

- Follow the on-screen instructions to insert and remove the cartridges.
- White ink does not change. White ink remains unchanged as the conventional ECO-SOL INK type.
- All (CMYK) must be changed. For CMYK, ECO-SOL INK and ECO-SOL MAX ink cannot coexist.
- No SOL INK cleaning cartridges are required.

